

Vismart

Intelligent Building Systems


VIDEOCOM-UK Electronics and Software Ltd.

Unit 2, Little Britain House, Alma Road
Chesham, Buckinghamshire
HP5 3HB
London, United Kingdom

Vismart

Intelligent Building Systems

VIP-9006
SURFACE MOUNT
USER MANUAL

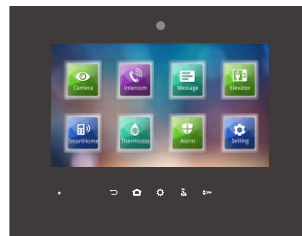

INTRODUCTION.....	2
BUTTON AND LED INFORMATION.....	3
TECHNICAL PROPERTIES.....	4
DIMENSIONS AND ACCESSORIES.....	5
MAIN MENU INSTRUCTIONS.....	6
HOW TO USE SHORT KEYS.....	7
SCREEN IMAGE AND COLOUR SETTINGS.....	8
CAMERA & INTERCOM.....	9-10
INFORMATION SERVICE & ELEVATOR.....	11
SMART HOME.....	12-13
ALARM.....	14-22
SETTINGS.....	24-31

We are very grateful that you choose our IP Video Intercom System.
Please read the manual and follow the steps carefully.
Consult the authorized services if you have any queries.

GENERAL PROPERTIES

VIP-9006 TCP/IP will mesmerize you with its 7" high resolution touch screen with a wide viewing angle. It will bring joy and comfort in your life with its sleek and clean design, high-end technology and complicated hardware.

- + FULL TCP/IP SYSTEM
- + ALARM ENTEGRATION
- + HOME AUTOMATION SUPPORT
- + HIGH RESOLUTION 7" SCREEN
- + ROBUST CAPACITIVE TOUCH SCREEN
- + INTERCOM BETWEEN APPARTMENTS
- + IP CAMERA VIEWING
- + INDOOR BELL SUPPORT
- + SD CARD SUPPORT
- + RECEIVING MESSAGES WITH CENTRAL SOFTWARE
- + IMAGED ADVERTISING WITH CENTRAL SOFTWARE
- + VISITOR PICTURE RECORD
- + H.264 VIDEO CODEC SUPPORT



WARNING


SECURITY INFORMATION

- Only qualified technicians can install and repair this door panel.
- Do not remove the plastic and metal parts of the door panel to avoid warranty void.
- Do not put your ear too close to the door bell when it rings to prevent any temporary or permanent harm to hearing.
- Please inform authorized services of any malfunctioning device as they may effect other devices performance.
- Please read the user manual and security information before start using the product.



Please warn your children to prevent any warnings above to happen.

BUTTON AND LED INFORMATION

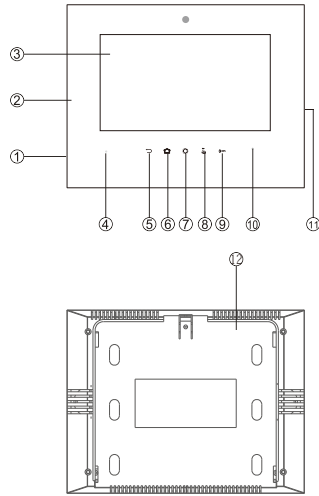


- ① Microphone
- ② Touch Panel
- ③ 7" LCD Touch Screen
- ④ LED
- ⑤ Volume Button
- ⑥ Main Menu
- ⑦ Settings
- ⑧ Security
- ⑨ Sleep Button
- ⑩ Status Indicator LED
- ⑪ Speaker
- ⑫ Surface Mount Frame

TECHNICAL PROPERTIES


Input Voltage	DC12V-18V
Display	7" Touch LCD Screen
Touch Screen	Capacitive
Standby Current	150mA@24V
Operating Current	250mA@24V
Sound	70db
Operating Temperature Range	-20°C ~55°C
Resolution	800X480
Call Duration	2 minutes
Dimensions	216mmx167mmx29mm

DIMENSIONS AND ACCESSORIES

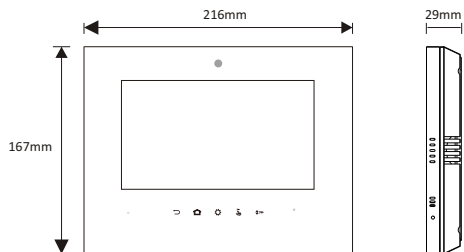

Accessories:


- ①
- 1. Zone Connection Cable
 - 2. System Cable(or RJ45 jack)
 - 3. Indoor Connection Cable
 - 4. Smart Home Control Cable
 - 5. Door Bell Cable
 - 6. RS485 Cable

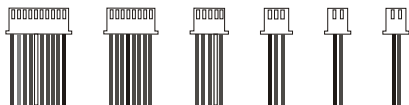

- ② Wall Plugs and Screws:



MAIN MENU INSTRUCTIONS

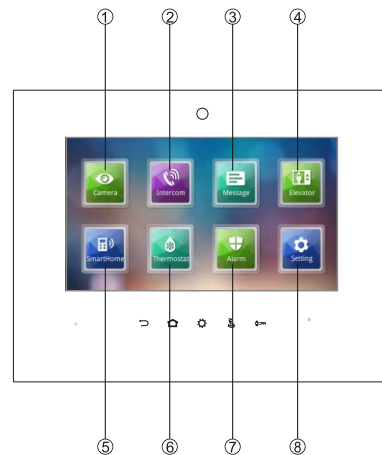

- ① Camera
- ② Intercom
- ③ Information Service
- ④ Elevator
- ⑤ Smart Home
- ⑥ Thermostat
- ⑦ Alarm
- ⑧ Settings

HOW TO USE SHORT KEYS



Mute Button; When you mute the device, you will see the mute icon as shown in the image below.



Home/Main Menu; Directly return to main menu with this button.



Settings; Opens the settings button for adjusting the device settings.





Security Call; Call the security with this button. Can be used only when system has security device integrated.



Door Unlock; Unlocks the door with a single touch.

SCREEN IMAGE AND COLOUR SETTINGS

Touch and hold anywhere on the screen for 3 seconds. A pop up screen will appear, colour tone of the display and background image can be changed in this screen.

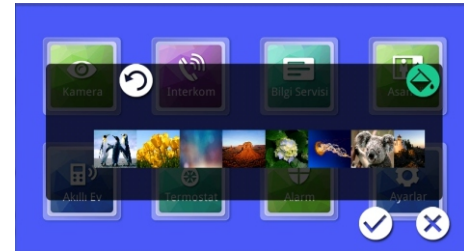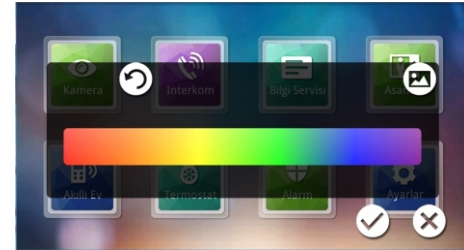


CAMERA




Camera

Integrated IP cameras can be monitored from this menu. Doors with IP door panels can be unlocked and visitor picture can be saved with a touch of a button.

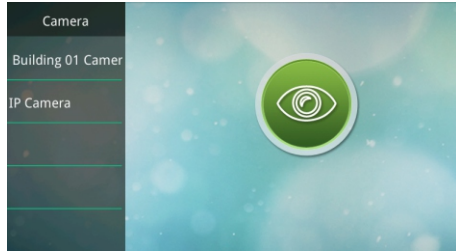

Intercom

Neighbours, security and clerk can be called from this menu. Neighbours can be saved to Contact List with their names. Call history, contact list and other calls can be managed in the easy to use interface.

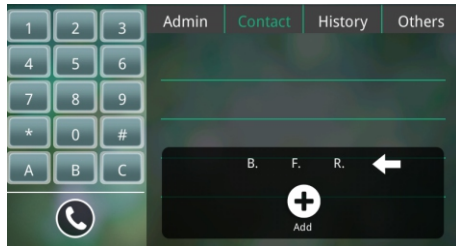

INTERCOM

To create a contact; Go into the Contact List and enter the flat number you want to save, for example '0123' and touch the **+** button. On the second screen type the name of the contact and save it by touching the **Enter** button.



To delete a contact saved before Find the contact you want to delete, touch and hold for 3 seconds on the name. Contacts can be deleted, blacklisted or edited with the options appears on the pop up screen.




INFORMATION SERVICE



Information Service

Notices or messages from security can be viewed, images and videos saved in an SD card can be screened in this menu.


A server needs to be integrated in the system to use this service.

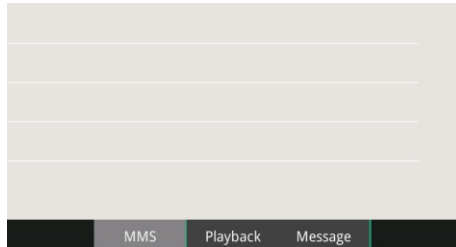

Elevator

Elevator can be called before leaving the flat by using the Elevator Call function.

Elevator call system must be integrated to the system to use this service.

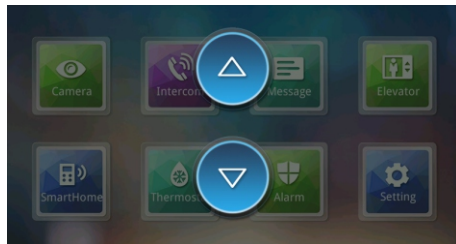


SMART HOME



Smart Home

Connected smart home appliances can be controlled from this menu.

Scenarios can be created to control multiple appliances with a single button.

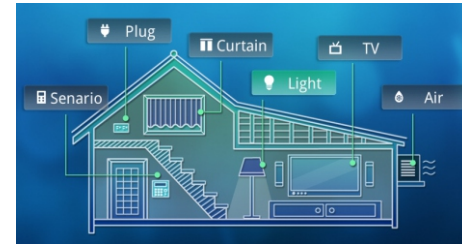

SMART HOME



Thermostat

Integrated air conditioners and heaters can be controlled from this menu.




ALARM

Stay Mode

Activate the Stay Mode when you get home by entering the 5 digit user password and touch the 'Stay' button.

Only door sensor will stay active when the Stay Mode is activated, motion sensor will be deactivated.

- Factory default user password is '12345'. Password can be changed in the Settings under the Alarm menu.
- This service can be used if alarm system is integrated to the system.

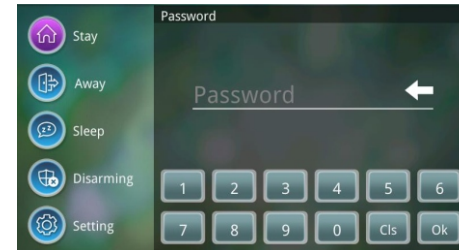


ALARM

Away Mode

Activate the Away Mode when you leave your place by entering the 5 digit user password and touch the 'Away' button. 30 seconds countdown will be started once the alarm is armed, door must be closed before the countdown finished to prevent alarm being triggered.

- Factory default user password is '12345'. Password can be changed in the Settings under the Alarm menu.

- This service can be used if alarm system is integrated to the system.

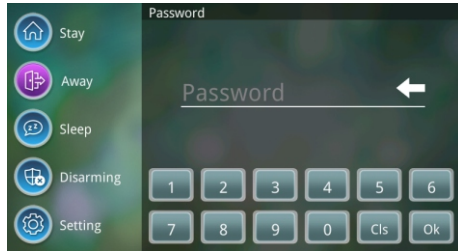


ALARM

Night Mode

Activate the night mode by entering the 5 digit user password and touch the 'Night' button.


- Factory default user password is '12345'. Password can be changed in the Settings under the Alarm menu.

- This service can be used if alarm system is integrated to the system.

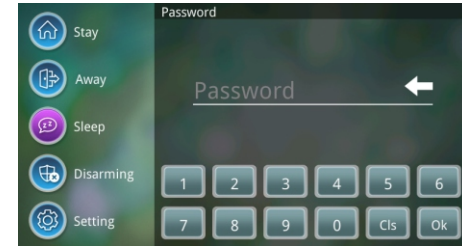

Cancelling Alarm

Cancel the alarm by entering the 5 digit user password and touch the 'Cancel Alarm' button.

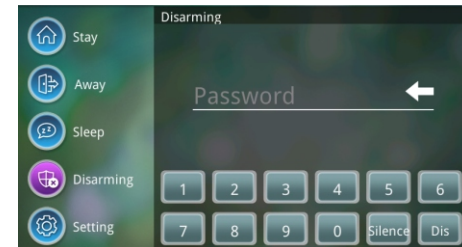

ALARM



Settings

Alarm history can be screened and deleted, current statuses of alarm peripherals can be checked and user password can be changed in the settings menu.

Password

password ←

New Password ←

Confirm Password ←

1	2	3	4	5	6
7	8	9	0	Cls	Ok

Alarm devices can be chosen to be activated or deactivated for any of the Stay, Away and Night mode in the settings menu.



ALARM




SETTINGS




Display

- Display brightness can be adjusted in the Display section.
- Screensaver timer can be adjusted between 1 minute to 30 minutes.
- Screensaver can be changed to clock display, display turn off or an image of your choice.

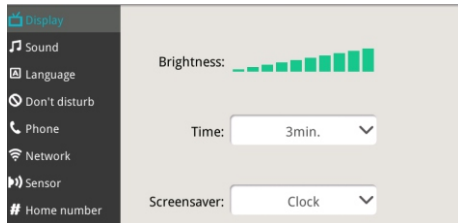


SETTINGS

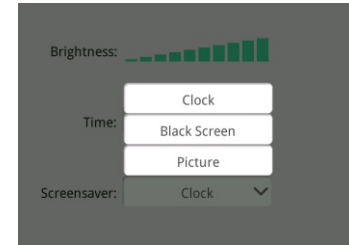

Notification Sound



Touch melody and volume, bell melody and volume can be adjusted in this section.

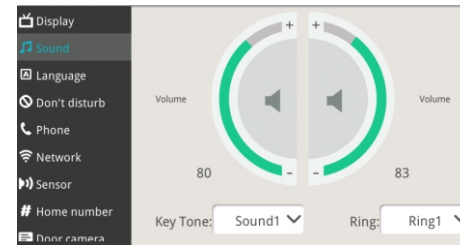

SETTINGS

Call Volume

Microphone and speaker volumes can be adjusted in this menu.
- Only technicians can enter this menu with technician password.
- Do not change these settings if it is not necessary.

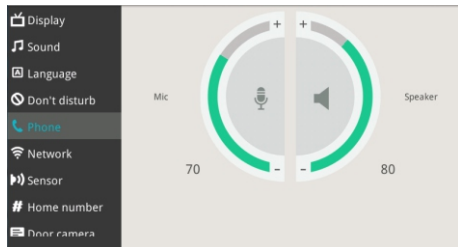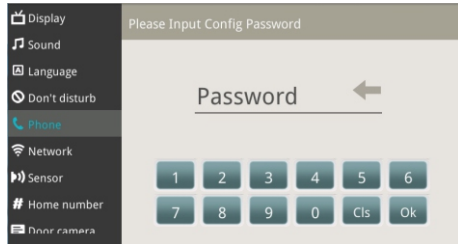

SETTINGS

Don't Disturb

Normal, Mute, Block and Temporary (specific time intervals) modes can be chosen for different situations.

Mute Mode


Incoming calls are not disabled and can be seen on display but ring is muted in this mode.


Block Mode

Incoming calls are blocked in this mode. Receiver is shown as busy for the callers.

Temporary Mode

Incoming calls are blocked in the specified time interval. Receiver is shown as busy for the callers in this time interval.

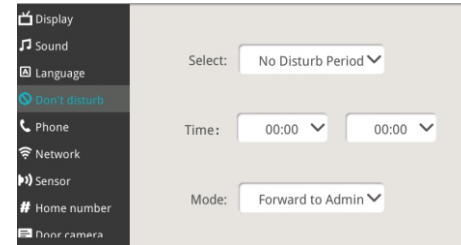


This icon  will appear when Don't Disturb mode is activated.



SETTINGS

Language


Language can be changed to Turkish, English and Chinese.

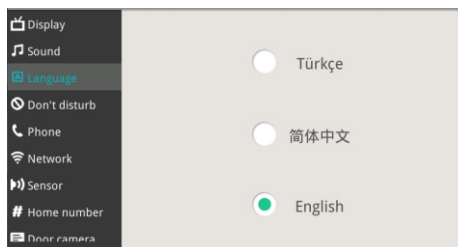

Network

To access network settings user needs to enter security password.



Factory default of the security password is 234567.

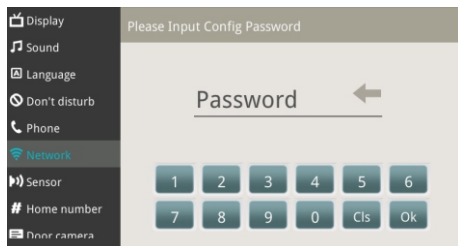

SETTINGS

In the network settings; IP, Mask, DNS and server addresses can be edited.

Note: These settings are set by technicians. Please don't change these settings on operating devices.

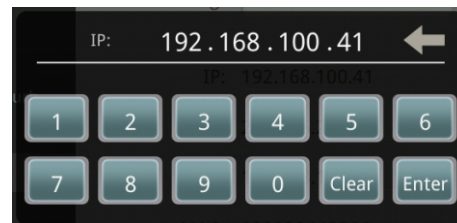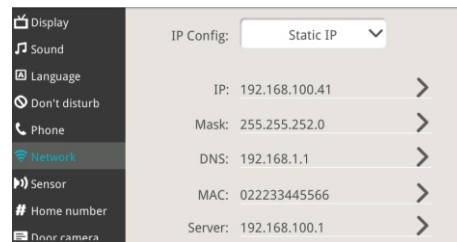

SETTINGS

IP: 255.255.252.0 ←

192.168.100.1

1	2	3	4	5	6
7	8	9	0	Clear	Enter

IP: 192.168.1.1 ←

192.168.100.1

1	2	3	4	5	6
7	8	9	0	Clear	Enter

SETTINGS

022233445566 ←

SUB IP

A	B	C	D	E	F
1	2	3	4	5	6
7	8	9	0	Clear	Enter

IP: 192.168.100.1 ←

192.168.100.1


1	2	3	4	5	6
7	8	9	0	Clear	Enter

SETTINGS

Sensor

Alarm sensors can be activated or deactivated in the Sensor menu.


Factory default of the security password is 234567.

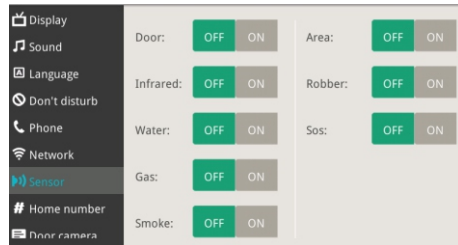

Flat Number

Flat number can be changed in the Flat Number menu.

Factory default of the security password is 234567.

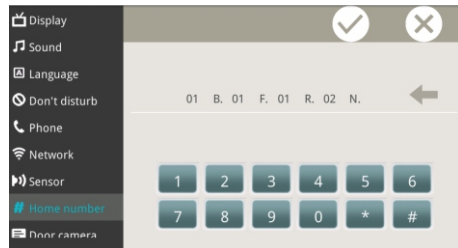


SETTINGS

Door Station

This menu shows which door station is connected to the current device.

Factory default of the security password is 234567.

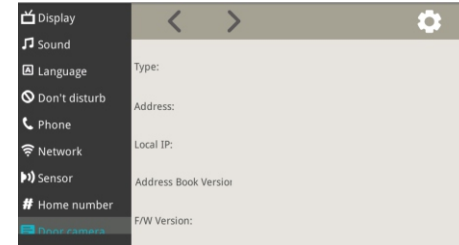


Other



This menu includes;

- Clean Device Data
- Software Update
- Factory Reset
- Notification Settings
- Door Camera

Note: These settings are set by technicians. Please don't change these settings on operating devices.

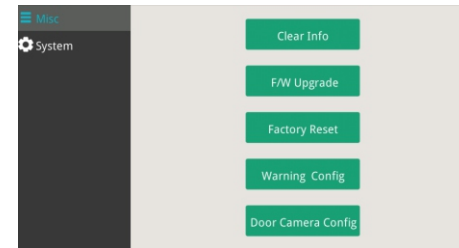

SETTINGS

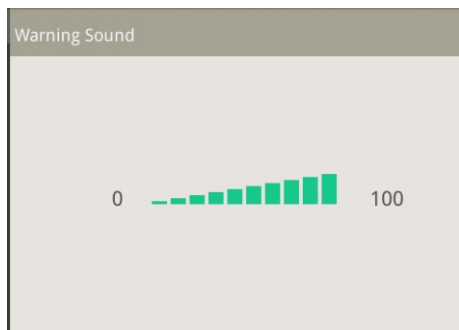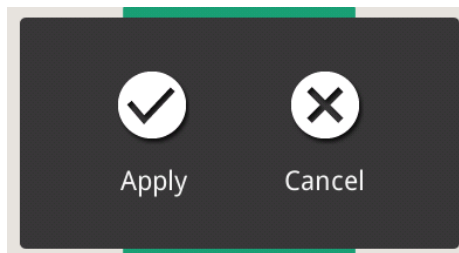

SETTINGS

System Information

Detailed system information about touch panel and door station is monitored in this menu.

Misc	Server IP	192.168.100.10
System	Firmware Version	1.2.3.1.
	Hardware Version	V3
	Address Book Version	1.0
	Working Mode	Normal
	Outdoor Address Book Version	0

2 / 2


Misc	Device Type	Indoor Phone with SD card
System	Address	Building 01 Floor 01 Room 01 Ext 02
	Serial	*****
	Local IP	192.168.100.41
	Outdoor IP	
	Entrance IP	192.168.100.30

1 / 2

ALARM ZONES

Device has 5 alarm zones(2 zone for burglary alarm and 3 zone for 24 hour security).

ALARM ZONES


ZONE1 Door Sensor: Detects the entrance door sensor 

ZONE2 Infrared PIR: Detects motions 

24 HOUR ZONES

ZONE 3 Water Leakage Sensor 

ZONE 4 Gas Detector 

ZONE 5 Smoke Detector 

BURGLARY ALARM


When a sensor is triggered, high volume alarm will activate and a notification will be sent to security.

24 HOUR ALARM

When one of the smoke, water leakage and gas detector is triggered even if the alarm is not armed, system activates the alarm and sends a notification to the security.

WATER VALVE

When the alarm is triggered by a water leakage sensor, water valve turns off automatically to prevent further leakage.

To turn back the water valve on; Stop the alarm, check the valve and surroundings and reset the alarm by entering the alarm password. Alarm system will reset and water valve will turn on. 

GAS VALVE

When the alarm is triggered by a gas detector, gas valve turns off automatically to prevent any further gas leakage.

To turn back the gas valve on; Stop the alarm, check the valve and surroundings and reset the alarm by entering the alarm password. Turn the gas valve on manually after alarm system is reset. 